



## Building Pipes and Accessories for your Bikes



**V-925 – Victory BAD BOY – 2005-UP HAMMER/JACKPOT**  
**V-926 – Victory BIG DADDY – 2005-UP HAMMER/JACKPOT**

Thank you for purchasing this RPW USA product. We believe that our products are the very best available and are engineered to provide a lifetime of use. These pipes can be installed on Victory Hammer/Jackpot models from 2006 to present. Basic hand tools and a service manual applicable to your model of motorcycle are all that is necessary to complete the installation.

QUANTITY	DESCRIPTION
1	Primary Pipe, Chrome
1	Front Heat Shield, Chrome
1	Rear Heat Shield, Chrome
1	Collector Heat Shield
1	Muffler
5	Small Hose Clamps
1	Large Hose Clamp
4	Exhaust Clamp, Large 06-pre/Small 03-05
1	TBC-250S T-Bolt Clamp
2	5/16" x 3/4" Fine Thread Bolts S/S
2	5/16" Flat Washer S/S
1	Muffler Bracket Insert
1	10mm x 90mm x 1.5 Metric Bolt
1	3/8" Flat Washer S/S
2	5/16" lock Washer
1	Frame Bracket
	Set of Instructions/Warning



## BAD BOY/ BIG DADDY - VICTORY 2 into 1 EXHAUST SYSTEM

**Step 1.** Begin by removing the existing pipe from the motorcycle, and then inspect the exhaust gaskets. If they are worn or deteriorated, fit the engine with a new set. Next, remove the rearmost bolt attaching the foot control bracket and loosen the front one but do not remove it. Rotate the control forward as shown. This will provide the necessary clearance to install the 2 into 1 primary pipe.



**Step 2.** Installation of the 2 into 1 pipe requires the lower frame rail to be cut off as shown. Save portion that you have cut off. Deburr the frame rail with a file or burr knife to leave a smooth edge and cover any bare metal with touchup paint to prevent rust and plug hole with plastic plug, available at any hardware store.



**Step 3.** Offer the primary pipe into place on the engine. Note that the right side electrical control cover has been removed from the frame to allow the pipe to slip into place.

**Step 4.** It may be necessary to pull on the RPW rear pipe to flex enough to clear the fins on the head. You may also tap on head pipe with rubber mallet before installation to spread header a tiny bit, (This process should ease in installation). Starting with the front head pipe, ease this section of the pipe past the fins and keep low on the motor section so the rear pipe will have room to pass by the back section of the fins. Once rear pipe is past fins, finesse rear pipe into rear head port and then maneuver front head pipe into front head port. NOTE: Heat shields must be in place for installation of the primary pipes (See step 8)




**Step 5.** After head pipes are in place, using the split head clamps as shown, install on the engine one half at a time. Snugly fit all exhaust flange nuts, but do not tighten them completely.





## BAD BOY/BIG DADDY - VICTORY 2 into 1 EXHAUST SYSTEM

**Step 6.** On 06 and up motorcycles, remove lower frame rail bolt. Use 10mm bolt included in kit and original pivot shaft nut with 3/8 washer to install frame bracket as shown.

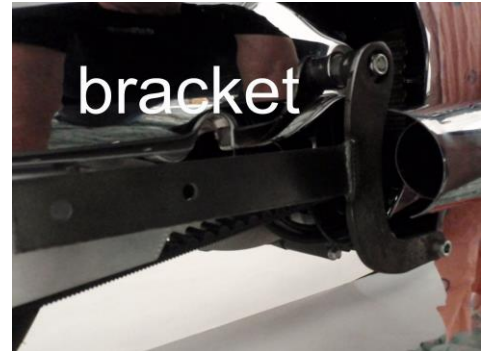

**Step 7.** Next, slip t-bolt clamp over front section of muffler with threads parallel to floor. Slide muffler carefully onto header slowly positioning bracket at same time over mounting holes. (You may need to use a rubber mallet to get muffler seated against end of header) Slide threaded muffler bracket insert into back mounting bracket welded to the muffler. Use 5/16" -18 bolts, flat washer and lock washers to attach

bracket to muffler. Now you may start

**Step 8.** To install collector heat shield, slip the supplied hose clamps through the hoops welded onto the backsides of each shield. Install the heat shield on the pipes and tighten all hose clamps evenly, aligning the shields to assure proper fitment of heat shields.



**Step 9.** Tighten band clamp at muffler to header connection. Tighten head clamps on header pipes.

**Step 10.** Prior to starting the engine, clean you exhaust free of oils and hand prints. Only use soap and water on ceramic exhaust. (SEE Instructions Below) Start your engine and check for exhaust leaks. You are now ready to enjoy your RPW USA exhaust pipes. Installation of this exhaust we recommend an Adjustable Fuel Controller. See your Victory Dealer for details.

**TUNING TIP.** To help prevent bluing, the engine should be properly tuned before running it with the new exhaust.

### CARE & MAINTENANCE

This bike is equipped with an RPW USA exhaust. RPW USA strives to offer the highest quality exhaust pipes. However, these pipes require care and maintenance. The following tips are suggested to insure years of service of your Chrome/Ceramic-Coated Exhaust System.

**OWNER & DEALER CARE INSTRUCTIONS:** After Installation and Before Engine Runs, Remove grease and /or skin oils from the exhaust surface. Stains and fingerprints will show when exhaust gets hot. **DO NOT CLEAN EXHAUST WHEN HOT.**

**CARE INSTRUCTIONS: Chrome:** Wipe down exhaust with rubbing alcohol and a soft cloth, dry thoroughly.

**Ceramic Coated:** Wipe the tubes down with a mild soap, warm water and a soft cloth, rinse & dry thoroughly.